

# **L2/L4 Managed Gigabit Ethernet Switch**

## **GS-4210 Series**

### Quick Installation Guide

# Table of Contents

1. Introduction .....	3
2. Package Contents .....	4
3. Requirements .....	5
4. Terminal Setup .....	6
5. Logon to the Console .....	7
6. Configuring IP Address via the Console .....	8
7. Saving the Configuration via the Console.....	10
8. Starting Web Management .....	11
9. Saving Configuration via the Web .....	13
10. Recovering Back to Default Configuration .....	14
11. Customer Support.....	16

## 1. Introduction

Thank you for purchasing PLANET L2/L4 Managed Gigabit Ethernet Switch. The description of this model is shown below:

GS-4210-8P2S	8-Port 10/100/1000T 802.3at PoE + 2-Port 100/1000X SFP Managed Switch
GS-4210-8P2T2S	8-Port 10/100/1000T 802.3at PoE + 2-Port 10/100/1000T + 2-Port 100/1000X SFP Managed Switch
GS-4210-24P4C	24-Port 10/100/1000T 802.3at PoE + 4-Port Gigabit TP/SFP Combo Managed Switch / 220W
GS-4210-24PL4C	24-Port 10/100/1000T 802.3at PoE + 4-Port Gigabit TP/SFP Combo Managed Switch / 440W
GS-4210-48T4S	48-Port 10/100/1000T + 4-Port 100/1000 SFP Managed Gigabit Switch
GS-4210-48P4S	48-Port 10/100/1000T 802.3at PoE + 4-Port 100/1000X SFP Managed Switch / 440W

**“Managed Switch”** is used as an alternative name in this Quick Installation Guide.

Open the box of the Managed Switch and carefully unpack it. The box should contain the following items:

## 2. Package Contents

Model Series	<b>GS-4210-</b>			
Model Name Package Item	8P2S	8P2T2S	24P4C / 24PL4C	48T4S / 48P4S
The Managed Switch	■	■	■	■
Quick Installation Guide	■	■	■	■
RS-232 to RJ45 Console Cable	-	■	■	-
Rubber Feet	■	■	■	■
Two Rack-mounting Brackets with Attachment Screws	■	■	■	■
Power Cord	■	■	■	■
SFP Dust Caps	2	2	4	4

If any item is found missing or damaged, please contact your local reseller for replacement.

### 3. Requirements

- Workstations running Windows XP/2003/Vista/7/8/2008, MAC OS X or later, Linux, UNIX, or other platforms are compatible with TCP/IP protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card)
- **Serial Port Connection** (Terminal)
  - The above Workstations come with COM Port (DB9) or USB-to-RS-232 converter.
  - The above Workstations have been installed with terminal emulator, such as Hyper Terminal included in Windows XP/2003.
  - **Serial cable** -- One end is attached to the RS-232 serial port, while the other end to the console port of the Managed Switch.
- **Ethernet Port Connection**
  - **Network cables** -- Use standard network (UTP) cables with RJ45 connectors.
  - The above PC is installed with **Web browser** and JAVA runtime environment plug-in.



#### Note

It is recommended to use Internet Explore 8.0 or above to access the Managed Switch. If the Web interface of the Managed Switch is not accessible, please turn off the anti-virus software or firewall and then try it again.

## 4. Terminal Setup

The GS4210-8P2T2S, GS-4210-24P4C and GS-4210-24PL4C are equipped with a console interface for local switch setup and maintenance. To configure the system, connect a serial cable to a **COM port** on a PC or notebook computer and to the RJ45 type of the console port of the Managed Switch.

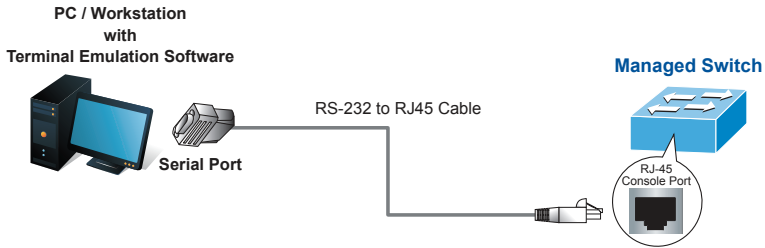


Figure 4-1 Managed Switch Console Connectivity

A terminal program is required to make the software connection to the Managed Switch.

1. Run terminal program on the OS.
2. When the following screen appears, make sure that the COM port should be configured as:

- Baud : 115200
- Data bits : 8
- Parity : None
- Stop bits : 1
- Flow control : None

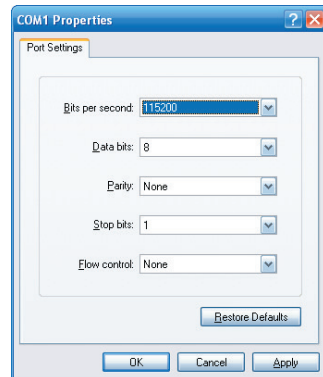


Figure 4-2 COM Port Configuration



### Note

Console interface is not available for the GS-4210-8P2S, GS-4210-48T4S and GS-4210-48P4S.

## 5. Logon to the Console

Once the terminal is connected to the device, power on the Managed Switch and the terminal will display “running testing procedures”. Then, the following message asks to log-in user name and password. The factory default user name and password are shown as follows, and the login screen in Figure 5-1 appears.

```
Username: admin  
Password: admin
```

```
Press any key to continue  
Username: admin  
Password: *****  
GS-4210-8P2T2S#
```

**Figure 5-1:** Managed Switch Console Login Screen

The user can now enter commands to manage the Managed Switch. For a detailed description of the commands, please refer to the following chapters.



### Note

1. For security reason, please change and memorize the new password after this first setup.
2. Only accept command in lowercase letter under console interface.

## 6. Configuring IP Address via the Console

The Managed Switch is shipped with default IP address as follows:

```
IP Address: 192.168.0.100  
Subnet Mask: 255.255.255.0
```

To check the current IP address or modify a new IP address for the Switch, please use the procedures as follows:

### ■ Show the current IP address

1. At the "**GS-4210 Series#**" prompt, enter "**show ip**".
2. The screen displays the current IP address, Subnet Mask and Gateway as shown in Figure 6-1.

```
Press any key to continue  
Username: admin  
Password: ****  
GS-4210-8P2T2S# show ip  
IP Address: 192.168.0.100  
Subnet Netmask: 255.255.255.0  
Default Gateway: 192.168.0.254
```

Figure 6-1: IP Information Screen

### ■ Configuring IP address

3. At the "**GS-4210 Series#**" prompt, enter "**configure**".
4. At the "**GS-4210 Series(config)#**" prompt, enter the following command and press **<Enter>** as shown in Figure 6-2.

```
GS-4210 Series(config)# ip address 192.168.1.100 mask 255.255.255.0  
GS-4210 Series(config)# ip default-gateway 192.168.1.254
```



The previous command would apply the following settings for the Switch.

**IP Address: 192.168.1.100**  
**Subnet Mask: 255.255.255.0**  
**Gateway: 192.168.1.254**

```
Press any key to continue
Username: admin
Password: *****
GS-4210-8P2T2S# configure
GS-4210-8P2T2S(config)# ip address 192.168.1.100 mask 255.255.255.0
GS-4210-8P2T2S(config)# ip default-gateway 192.168.1.254
```

**Figure 6-2:** IP Address Screen

5. Repeat Step 1 to check if the IP address is changed.

If the IP is successfully configured, the Managed Switch will apply the new IP address setting immediately. You can access the Web interface of the GS-4210 Managed Switch Series through the new IP address.



Note

If you are not familiar with console command or the related parameter, enter "?" anytime in console to get the help description.

## 7. Saving the Configuration via the Console

In the switch, the running configuration file stores in the RAM. In the current version, the running configuration sequence running-config can be saved from the RAM to FLASH by **writing** the command or **copying** the **running-config startup-config** command, so that the running configuration sequence becomes the startup configuration file, which is called configuration save.

At the "**GS-4210 Series#**" prompt, enter "**copy running-config startup-config**" as shown in Figure 7-1.

```
Press any key to continue
Username: admin
Password: ****
GS-4210-8P2T2S# copy running-config startup-config
Success
```

Figure 7-1: The Configuration Screen

## 8. Starting Web Management

The following shows how to start up the **Web Management** of the Managed Switch. Note the Managed Switch is configured through an Ethernet connection. Please make sure the manager PC must be set on the same **IP subnet address**.

For example, the default IP address of the Managed Switch is **192.168.0.100**, then the manager PC should be set at **192.168.0.x** (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

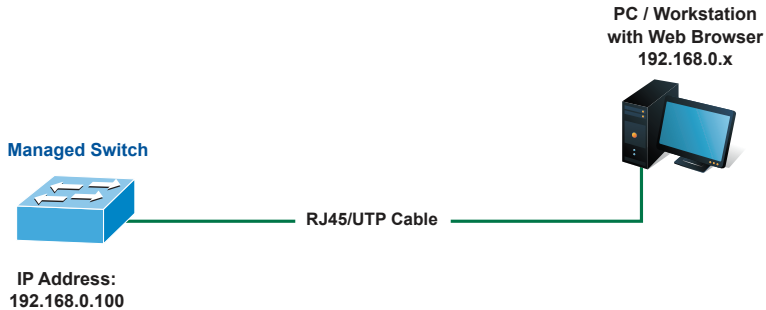


Figure 8-1: IP Management Diagram

### ■ Logging in to the Managed Switch

1. Use Internet Explorer 8.0 or above Web browser and enter IP address **<http://192.168.0.100>** to access the Web interface.
2. When the following dialog box appears, please enter the default user name and password "**admin**". The login screen in Figure 8-2 appears.

Default Username: **admin**  
Default Password: **admin**

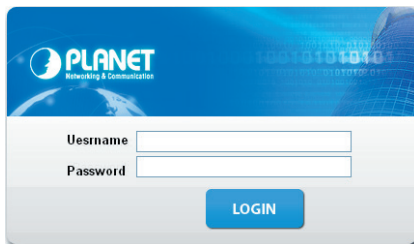



Figure 8-2: Login Screen

3. After entering the password, the main screen appears as Figure 8-3 shows.



**Figure 8-3:** Web Main Screen of Managed Switch

The Switch Menu on the left of the Web page lets you access all the commands and statistics the Managed Switch provides.

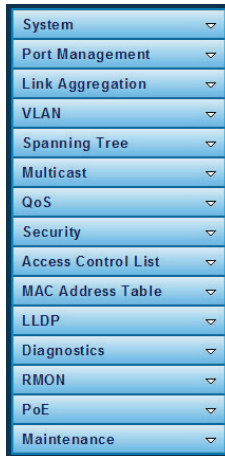

**Figure 8-4:** Switch Menu

Now, you can use the Web management interface to continue the Switch management.


Please refer to the user's manual for more.

## 9. Saving Configuration via the Web


In the Managed Switch, the running configuration file stores in the RAM. In the current version, the running configuration sequence of running-config can be saved from the RAM to FLASH by **"Save Configurations to FLASH"** function, so that the running configuration sequence becomes the startup configuration file, which is called configuration save.

To save all applied changes and set the current configuration as a startup configuration, the startup-configuration file will be loaded automatically across a system reboot.

1. Click **"Save > Save Configurations to FLASH"** to login "Configuration Manager" Page.

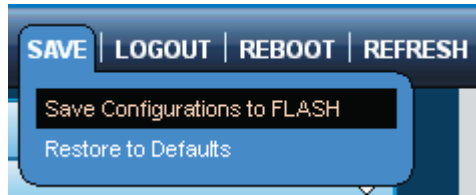

2. Press the **"Apply"** button to save running configuration to start up configuration.

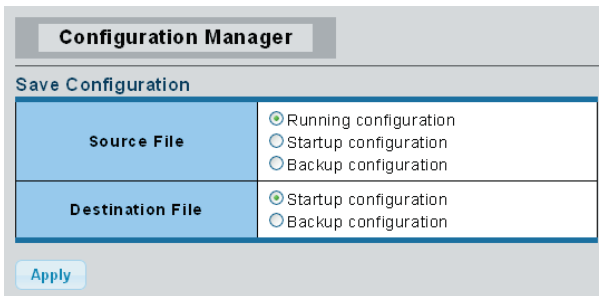

Configuration Manager	
Save Configuration	
Source File	<input checked="" type="radio"/> Running configuration <input type="radio"/> Startup configuration <input type="radio"/> Backup configuration
Destination File	<input checked="" type="radio"/> Startup configuration <input type="radio"/> Backup configuration
<input type="button" value="Apply"/>	

## 10. Recovering Back to Default Configuration

### ■ IP Address has been changed or admin password has been forgotten –

To reset the IP address to the default IP Address **"192.168.0.100"** or reset the login password to default value, press the hardware **reset button** on the front panel for about **10 seconds**. After the device is rebooted, you can login the management Web interface within the same subnet of 192.168.0.xx.

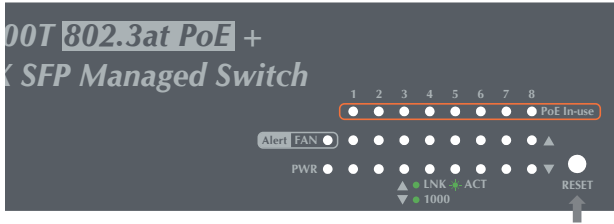


Figure 9-1: GS-4210-8P2S Reset Button

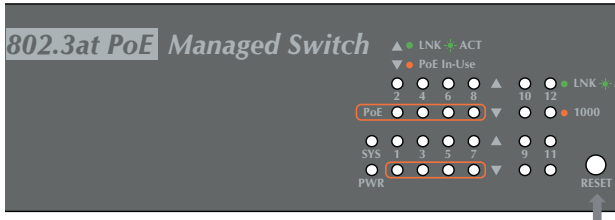


Figure 9-2: GS-4210-8P2T2S Reset Button



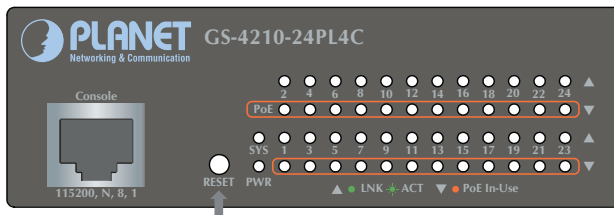


Figure 9-3: GS-4210-24P(L)4C Series Reset Button

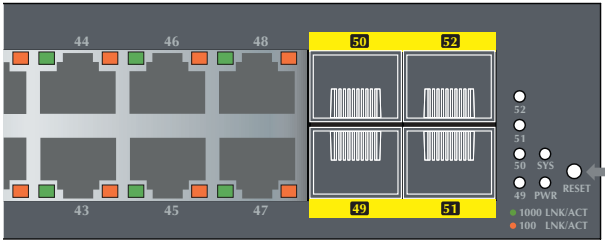

**Figure 9-4:** GS-4210-48T4S Reset Button

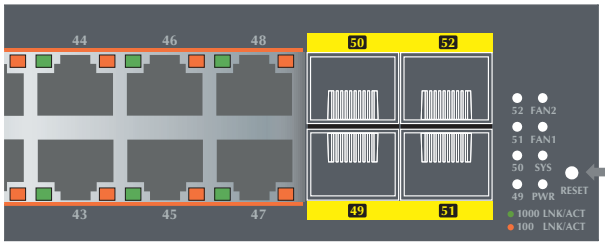

**Figure 9-5:** GS-4210-48P4S Reset Button

---

## 11. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and User's Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQ:

<http://www.planet.com.tw/en/support/faq.php?type=1>

Switch support team mail address:

[support\\_switch@planet.com.tw](mailto:support_switch@planet.com.tw)

GS-4210 Series User's Manual:

<http://www.planet.com.tw/en/support/download.php?type1=1&model=&type=3>



(Please select your switch model name from the Product Model drop down menu)

Copyright © PLANET Technology Corp. 2015.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.